


..... 1

Read / Write ..... 1

# EEPROM Update

x EtherCAT Slave EEPROM / CoeSDO / Register read, write

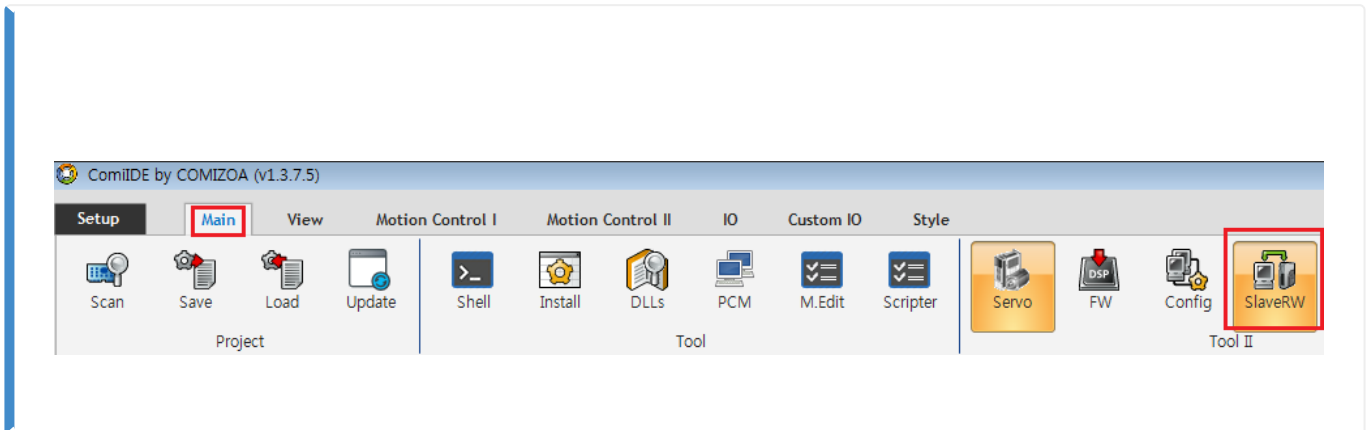

- ComiIDE Main - Tool II Slaves SlaveRW

### Read / Write

 A screenshot of the 'Slave RW' dialog box. The left pane shows a tree view of EtherCAT slaves, with '03 : [0219] ETS-DI32N-M' selected and highlighted by a red box labeled '1'. The right pane shows tabs for 'EEPROM', 'CoE SDO', 'Register', and 'Update', with 'EEPROM' selected and highlighted by a red box labeled '2'. Below the tabs, there are input fields for 'Register', 'Size', and 'Value', with the 'Register' field highlighted by a red box labeled '3'. At the bottom, there are 'Read' and 'Write' buttons, with the 'Read' button highlighted by a red box labeled '4'.
 

- List Slave
- EEPROM / Coe SDO / Register
- Read Value Read
- Write Value Write

From:

<https://www.comizoa.com/info/> - -

Permanent link:

<https://www.comizoa.com/info/doku.php?id=application:comiide:tool:slaverw:slaverw&rev=1575276364>

Last update: **2024/07/08 18:23**