


.....	1
Read / Write	1

ESC Read / Write

x EtherCAT Slave EEPROM / CoeSDO / Register read, write

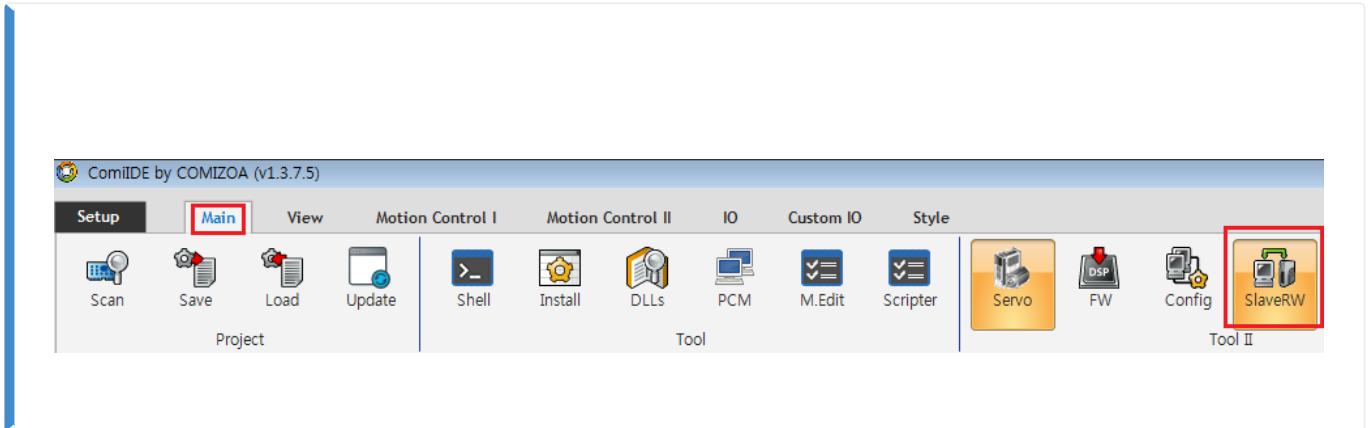

- ComiIDE Main - Tool II Slaves SlaveRW

Read / Write

The 'Slave RW' dialog box is shown. The tree view on the left lists EtherCAT slaves. The selected slave is '03 : [0219] ETS-DI32N-M'. The 'Register' tab is selected in the top right. The 'Read' button is highlighted with a red box.

- List Slave
- EEPROM / Coe SDO / Register
- Read Value Read
- Write Value Write

From:

<https://www.comizoa.com/info/> - -

Permanent link:

<https://www.comizoa.com/info/doku.php?id=application:comiide:tool:slaverw:slaverw&rev=1575276379>

Last update: **2024/07/08 18:23**