


..... 1

Read / Write ..... 1

# ESC Read / Write

x EtherCAT Slave EEPROM / CoeSDO / Register read, write

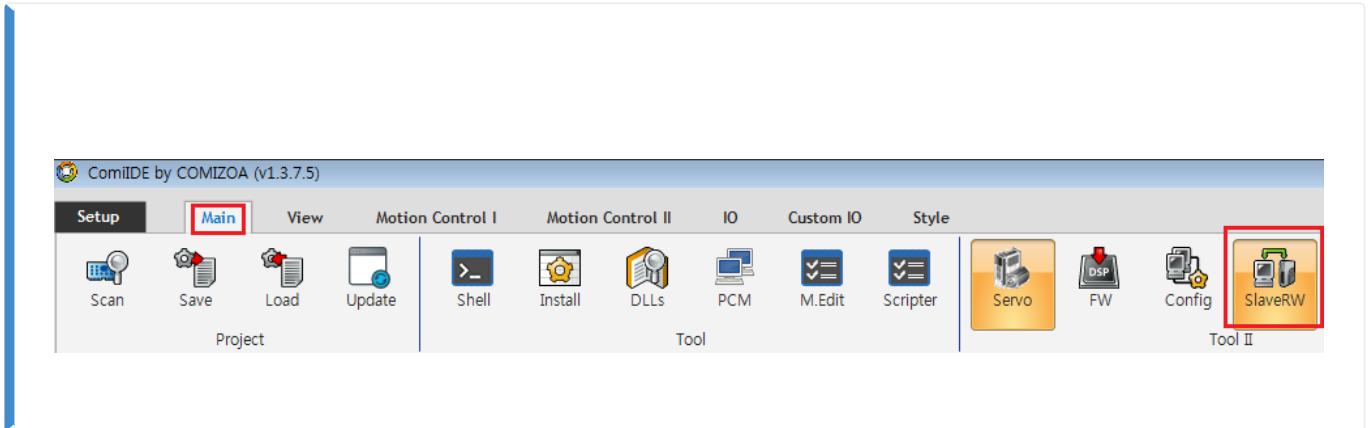

- ComiIDE Main - Tool II Slaves SlaveRW

### Read / Write

The 'Slave RW' dialog box is shown with the following elements highlighted by red boxes and numbers:

- 1:** The selected slave entry '03 : [0219] ETS-DI32N-M' in the left tree view.
- 2:** The 'Register' tab in the top navigation bar.
- 3:** The input fields for 'Register', 'Size', and 'Value' in the right panel.
- 4:** The 'Read' and 'Write' buttons at the bottom of the dialog.

The dialog also shows a tree view of EtherCAT slaves under 'Net 0', including '00 : [02FF] MASTER-DC', '01 : [03FA] ETS-HUB08', '02 : [02FA] ETS-HUB06', '03 : [0219] ETS-DI32N-M', '04 : [0209] ETS-DI32N-M', '05 : [02FB] ETS-HUB06', '06 : [03FB] ETS-HUB08', '07 : [0201] ETS-D08MN', '08 : [0202] ETS-D08MN', and '09 : [03FC] ETS-HUB08'. At the bottom, there are 'Index Order' and 'ID Order' buttons.

- List Slave
- EEPROM / Coe SDO / Register
- Read Value Read
- Write Value Write

From:

<https://www.comizoa.com/info/> - -

Permanent link:

<https://www.comizoa.com/info/doku.php?id=application:comiide:tool:slaverw:slaverw&rev=1575335849>

Last update: **2024/07/08 18:23**