


..... 1

Read / Write 1

ESC Read / Write

x EtherCAT Slave EEPROM / CoeSDO / Register read, write

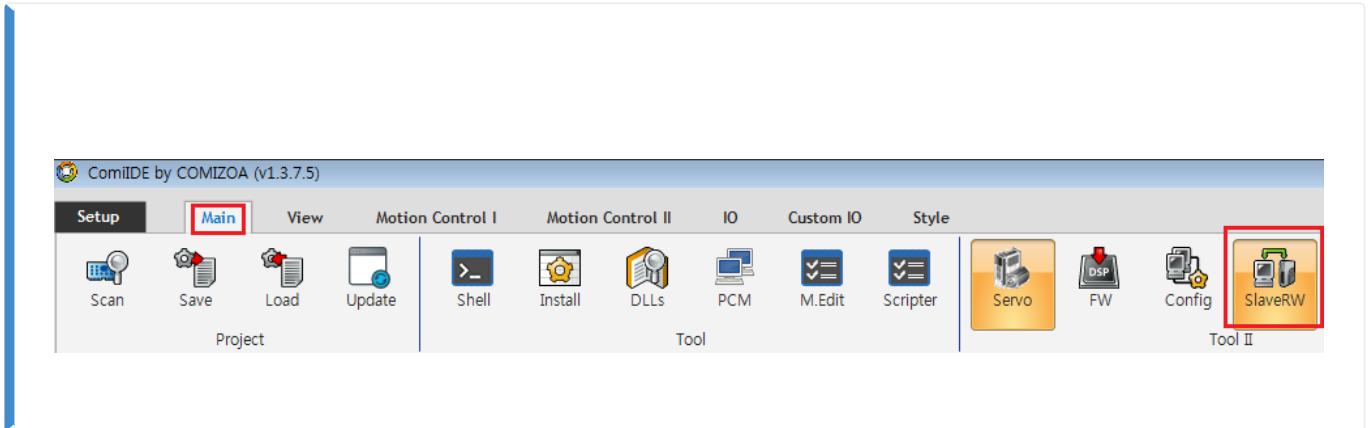

- ComiIDE Main - Tool II Slaves SlaveRW

Read / Write

 This screenshot shows the 'Slave RW' dialog box.

- 1**: A red box highlights the selected slave '03 : [0219] ETS-DI32N-M' in the left-hand tree view.
- 2**: A red box highlights the 'Register' tab in the top navigation bar.
- 3**: A red box highlights the 'Register', 'Size', and 'Value' input fields in the right-hand panel.
- 4**: A red box highlights the 'Read' and 'Write' buttons at the bottom of the dialog.

- List Slave
- EEPROM / Coe SDO / Register
- Read Value Read
- Write Value Write

comizoa, , ide, ethercat, , esc, read, write, eeprom, register, sdo

From:

<https://www.comizoa.com/info/> - -

Permanent link:

<https://www.comizoa.com/info/doku.php?id=application:comiide:tool:slaverw:slaverw&rev=1575619302>

Last update: **2024/07/08 18:23**