



# SW ECAT Master ID, PW

x SW ECAT Master

ID, PW

.

- Windows
- `\HKEY_LOCAL_MACHINE\SOFTWARE\COMIZOA\SoftEcatMaster\Administrator`
- ID, PW or

From:

<https://www.comizoa.com/info/> - -

Permanent link:

[https://www.comizoa.com/info/doku.php?id=faq:downloadandsetup:ethercat\\_sw:03\\_id\\_pw&rev=1642053211](https://www.comizoa.com/info/doku.php?id=faq:downloadandsetup:ethercat_sw:03_id_pw&rev=1642053211)

Last update: **2024/07/08 18:22**