

ecmSxCfg\_SetUnitDist ..... 1

    Synopsis ..... 1

    Description ..... 1

    Parameter ..... 1

    Return Value ..... 1

# ecmSxCfg\_SetUnitDist

## Synopsis

```
bool ecmSxCfg_SetUnitDist(  
    int netID,  
    int axisID,  
    double unitDistance,  
    ref int errorCode)
```

## Description

### UnitDistance

Move  
.  
' 1 '

## Parameter

- **netID** : EtherCAT NetworkID
- axisID : ID
- errorCode :

## Return Value

- False :
- True :

From:  
<https://www.comizoa.com/info/> - -

Permanent link:  
[https://www.comizoa.com/info/doku.php?id=platform:ethercat:100\\_api:10\\_desc:100\\_ecmsx:80\\_ecmsxcfg\\_setunitdist&rev=1623118070](https://www.comizoa.com/info/doku.php?id=platform:ethercat:100_api:10_desc:100_ecmsx:80_ecmsxcfg_setunitdist&rev=1623118070)

Last update: **2024/07/08 18:22**