

ecmSxCfg_SetUnitDist 1
 Synopsis 1
 Description 1
 Parameter 1
 Return Value 1

ecmSxCfg_SetUnitDist

Synopsis

```
bool ecmSxCfg_SetUnitDist(  
    int netID,  
    int axisID,  
    double unitDistance,  
    ref int errorCode)
```

Description

UnitDistance

Move
.
' 1 '

Parameter

- **netID** : EtherCAT NetworkID
- axisID : ID
- errorCode :

Return Value

- False :
- True :

From:
<https://www.comizoa.com/info/> - -

Permanent link:
https://www.comizoa.com/info/doku.php?id=platform:ethercat:100_api:10_desc:100_ecmsx:80_ecmsxcfg_setunitdist&rev=1624434641

Last update: **2024/07/08 18:22**