

ErrorCode : -5 ..... 1  
Case 1 ..... 1

## ErrorCode : -5

x DeviceLoad -5 .

### Case 1

- Master Device 12V
- Master Device 12V
- **12V**

From:  
<https://www.comizoa.com/info/> - -

Permanent link:  
[https://www.comizoa.com/info/doku.php?id=platform:ethercat:100\\_api:5\\_errorcode:5&rev=1624430370](https://www.comizoa.com/info/doku.php?id=platform:ethercat:100_api:5_errorcode:5&rev=1624430370)

Last update: **2024/07/08 18:22**