


Slave Info 1
..... 1
..... 1
Property 2

 
Slave Info

× Configurator Slave Information Tab
Address, SyncMode, DeviceType

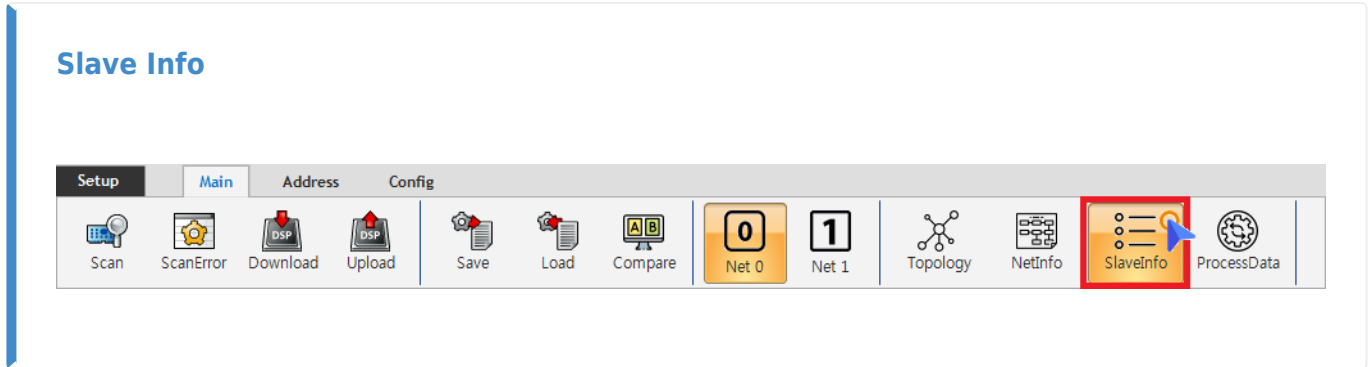

- SlaveInfo

- ESI Slave
- Address
- SyncMode



Property **FMMU / SM**



Product	ETS-A0402MV-E	ProductCode	0x5032D406
Vendor	COMIZOA	VendorID	0xAAAAAAAA
Group	ETS	RevisionNo	0x16102400

Address	
AddressMode A	ALIAS
Alias	580
AliasLMode B	IdentificationADO
AutoAddress	-6
PhysAddr_Hex C	0244
Info	
PhysicsType	YY
SyncMode D	FreeRUN
Support	
IsAoE	False
IsCoE	True
IsFoE	True
IsMbx	True
Type	
DeviceType_401 E	AI, A0
ProfileNo	401
SubProfileNo	12

Apply All **3**

1 - Info

- Slave Type

2 - Property

- Slave
- (default) ESI
- 가

3 - Apply All

- , Type Slave
- VendorID ProductCode가 Type

Property

AddressMode

- ALIAS : Master가 Slave Address
 - Slave
 - 가 OP Mode 가
- CSA : ALIAS Slave

AliasILMode

- IdentificationADO : Slave ESC Memory
- IdentificationReg134 : Slave
 - MicroController ID Switch가

PhysAddr_Hex

- 16 Address
- 402 Profile(Driver) IO **BaseAddress**

× Address가 Download Slave

SyncMode

- xml xml mode
- xml 가 , , FreeRUN
-

From: <https://www.comizoa.com/info/> - -

Permanent link: https://www.comizoa.com/info/doku.php?id=platform:ethercat:1_setup:10_config:20_desc:30_slaveinfo&rev=1586446094

Last update: 2024/07/08 18:22