


Addressing 1
 Addressing 1
 Index 1
 Address 2
 Custom 2
 Auto 4

Addressing

× Slave Mapping



- Index : Mapping
- Address : Mapping
- Custom : User Define Mapping
- Auto : Device Type

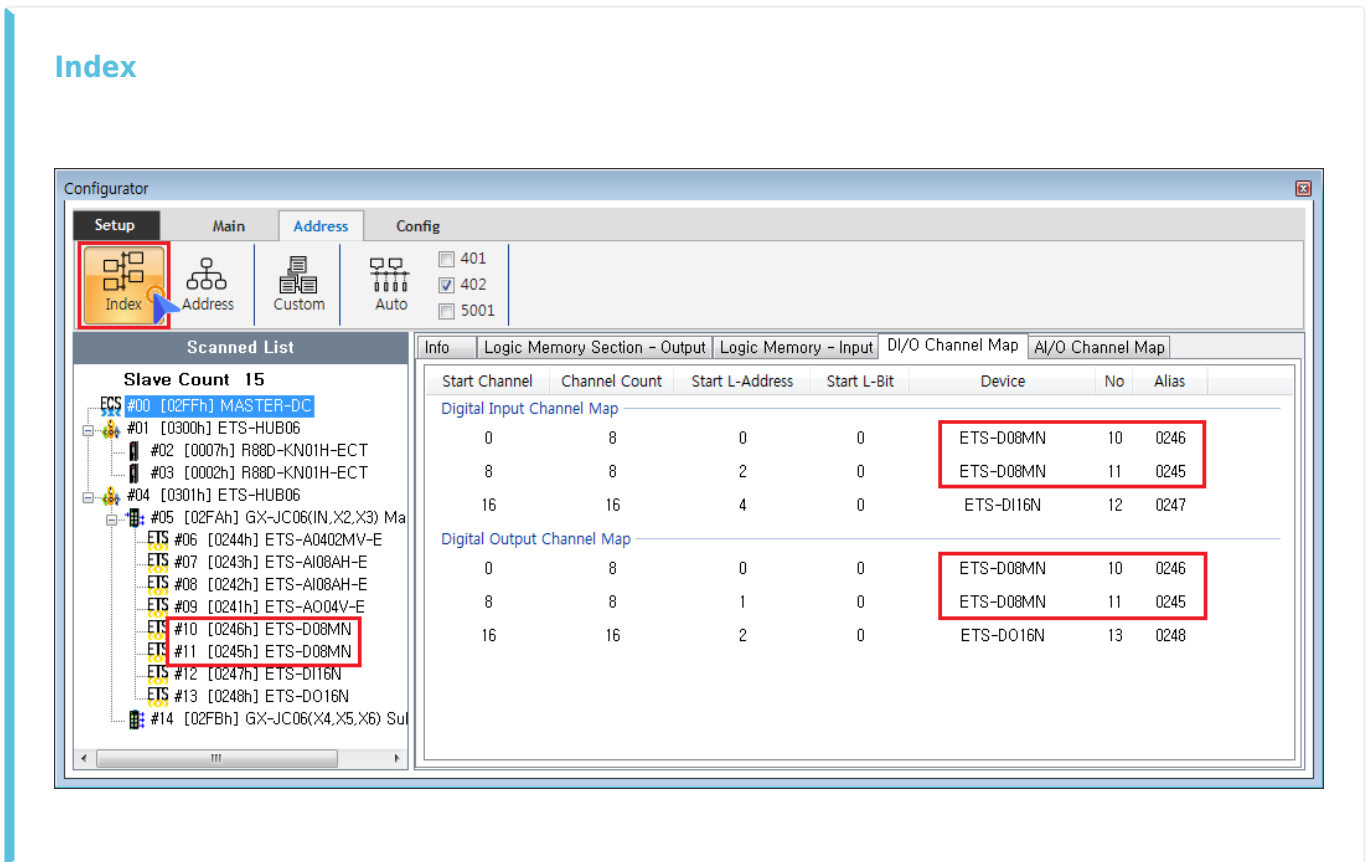

- Index 가
- IO ,
 - 10 ETS-D08MN (0x246) 0 ~ 7 Global Channel


○ 11

ETS-D08MN (0x245)

8 ~ 15

Global Channel

Address

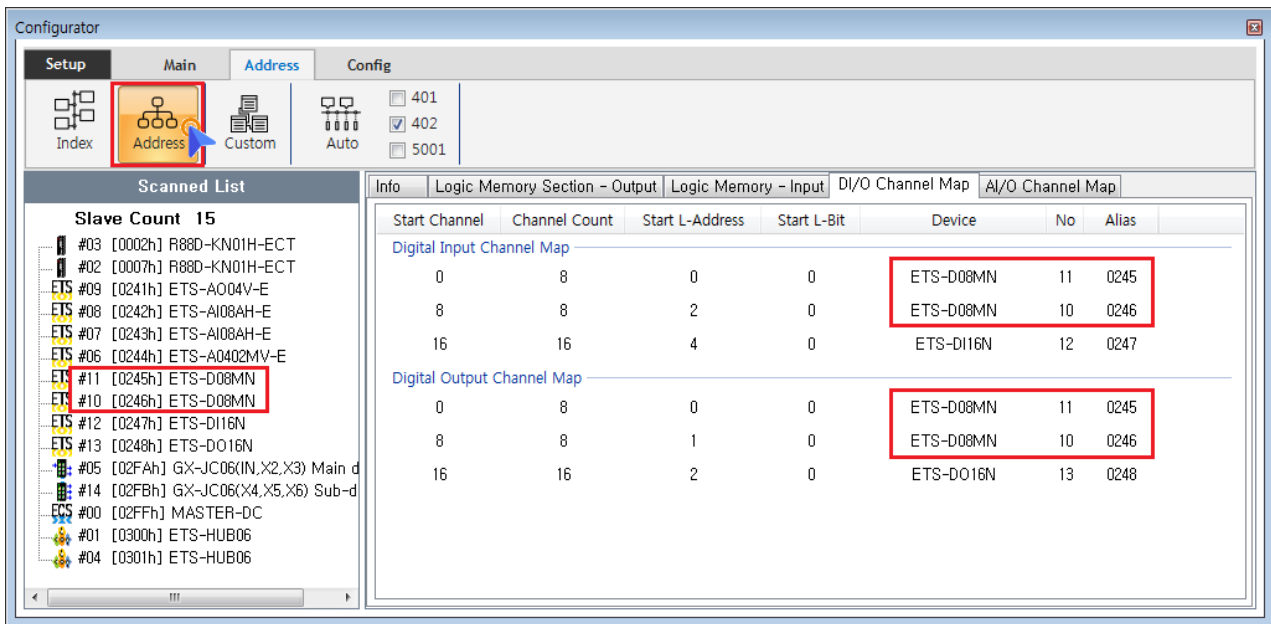

• Address

가

• IO

○ 0x245

가

ETS-D08MN

0 ~ 7

Global Channel

○ 0x246

가

ETS-D08MN

8 ~ 15


Global Channel

Custom




• Custom


User Defined Map

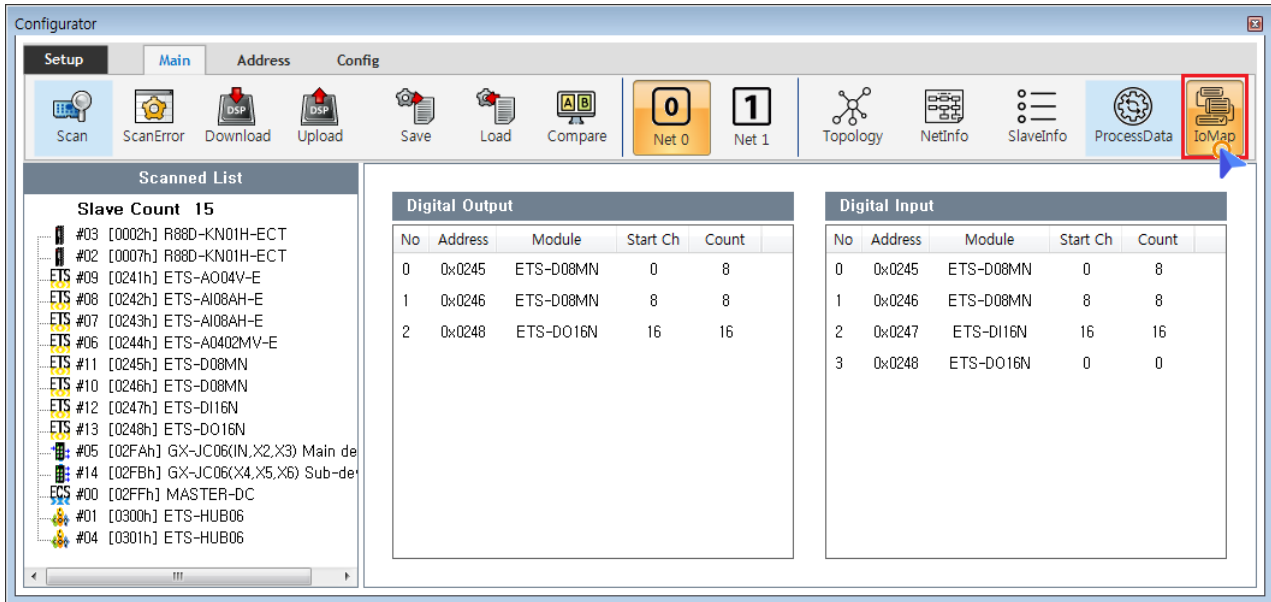


• Custom Main IoMap

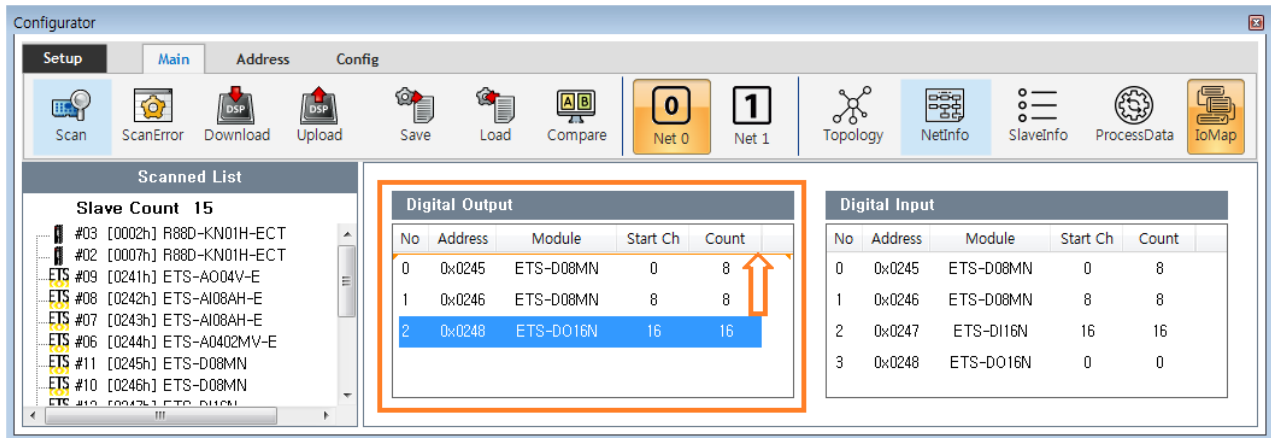

• Item Drag Map

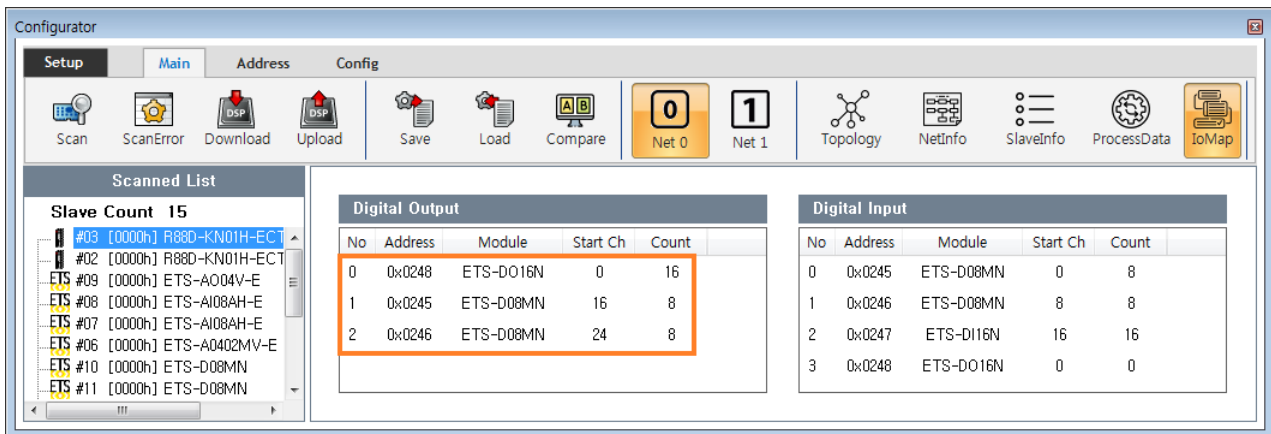


- Drop Map Channel

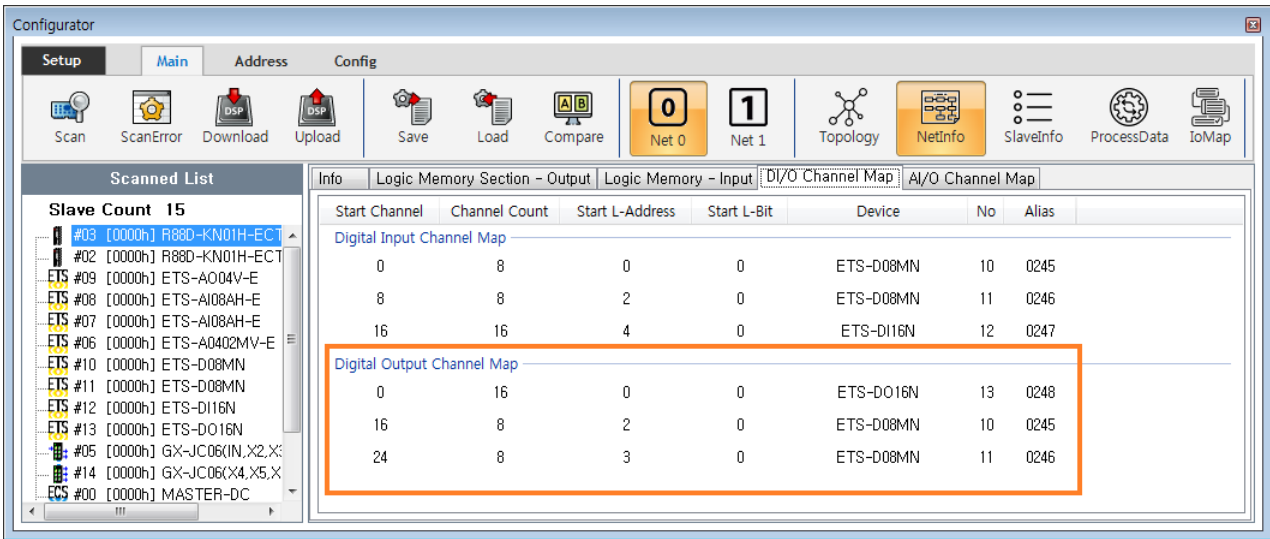

- Channel Map

Auto

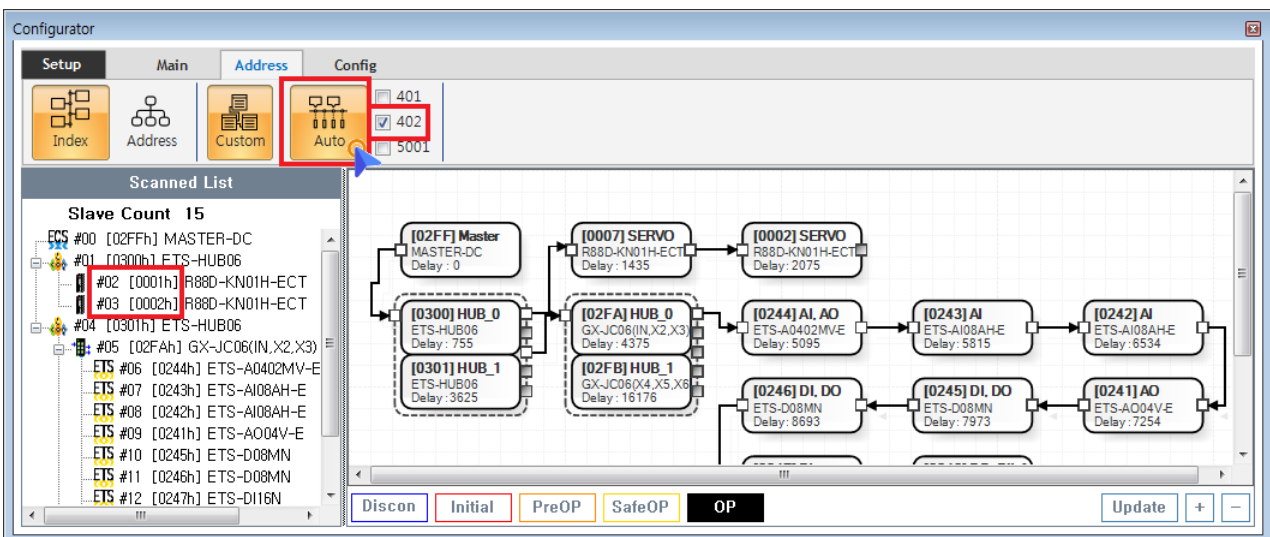

- Check ProfileType¹⁾
 - 401 Profile Driver Address가

- 1
- DeviceID Switch
- **Station Alias Selection**

1)

401 MocoController가 IO, 402 Driver, 5001

From:

<https://www.comizoa.com/info/> - -

Permanent link:

https://www.comizoa.com/info/doku.php?id=platform:ethercat:1_setup:10_config:20_desc:50_addressing&rev=1586857753Last update: **2024/07/08 18:22**