

Reset 1

Reset

× Configuration



The screenshot shows a navigation menu with tabs: Setup, Main, Address, and Config. Under the Config tab, there are four icons: DC.Delay (hourglass), MisConnect (circuit breaker), M.Change (refresh), and Reset (circular arrow with a play button). The Reset icon is highlighted with a red box. Below the screenshot, there is a list of items:

- **Config** **Reset**
- Configuration

× Device Boot Failed

Reset

Reset

PC

From:

<https://www.comizoa.com/info/> - -

Permanent link:

https://www.comizoa.com/info/doku.php?id=platform:ethercat:1_setup:10_config:20_desc:90_reset&rev=1587032629

Last update: **2024/07/08 18:22**