

Table of Contents

Config	1
Guide	1
Description	1
Trouble Shooting	2

Config

Configurator 및 Configuration 에 대한 안내 페이지입니다.

Guide

- **Configurator**
- **Configuration**

Description

- **Project 관리**
 - Slave List 비교
- **Setup : Configuration Option 설정**
- **TopologyView**
 - Topology, AIStatus, AIStatus Error 확인,
 - Port 상태, **InPort - OutPort** 오삽입, DC Delay 확인
- **Net Info**
 - Cycle Time, Process Time, Logic Memory 확인
 - DI, DO, AI, AO Channel Map
- **Slave Info**
 - Address, SyncMode, DeviceType 변경
- **Process Data**
- **Slot Info**
- **Addressing**
 - IO Module에 대한 Channel Mapping 방식 설정
 - Auto Addressing
- **Distibuted Clock Delay 측정**
- **Reverse Connected Slave**
- **Module Change**

Trouble Shooting

- **Scan Error**
- **Master Device 초기화 실패**
- 주소 확인 실패
- **Master-DC 확인 실패**
- **OP 전환 실패**

From:

<https://www.comizoa.com/info/> - -

Permanent link:

https://www.comizoa.com/info/doku.php?id=platform:ethercat:1_setup:10_config:start&rev=1586854423

Last update: **2024/07/08 18:22**