

Table of Contents

Config 1

Config

Configurator 및 Configuration 에 대한 안내 페이지입니다.

Config

- [Configurator](#)
- [Configuration](#)

Description

- [Project 관리](#)
 - Slave List 비교
- [Setup : Configuration Option 설정](#)
- [TopologyView](#)
 - Topology, AIStatus, AIStatus Error 확인,
 - Port 상태, **InPort - OutPort** 오삽입, DC Delay 확인
- [Net Info](#)
 - Cycle Time, Process Time, Logic Memory 확인
 - DI, DO, AI, AO Channel Map
- [Slave Info](#)
 - Address, SyncMode, DeviceType 변경
- [Process Data](#)
- [Slot Info](#)
- [Addressing](#)
 - IO Module에 대한 Channel Mapping 방식 설정
 - Auto Addressing
- [Distibuted Clock Delay 측정](#)
- [Reverse Connected Slave](#)
- [Module Change](#)

Trouble Shooting

- [Scan Error](#)

- **Master Device** 초기화 실패
- 주소 확인 실패
- **Master-DC** 확인 실패
- **OP** 전환 실패

From:

<https://www.comizoa.com/info/> - -

Permanent link:

https://www.comizoa.com/info/doku.php?id=platform:ethercat:1_setup:10_config:start&rev=1586858683

Last update: **2024/07/08 18:22**