

EEPROM Read / Write Failed ..... 1  
AL-Status Error ..... 1

# EEPROM Read / Write Failed

× Scan EEPROM Read Failed 가

## AL-Status Error

- **SCAN Slave AIStatus가 Initial**
  - SCAN , Master Slave AIStatus Initial
  - Slave AIStatus가
  - AIStatus Error가 Slave<sup>1)</sup> AIStatus가
- Slave AIStatus가 Initial , **Master Initial** ,
  - **Slave** Master OP , OP
  - AIStatus Error가

1)

Disconnect Init - PreOP

From: <https://www.comizoa.com/info/> - -

Permanent link: [https://www.comizoa.com/info/doku.php?id=platform:ethernet:1\\_setup:10\\_config:ts:eprom\\_read\\_failed&rev=1607069543](https://www.comizoa.com/info/doku.php?id=platform:ethernet:1_setup:10_config:ts:eprom_read_failed&rev=1607069543)

Last update: **2024/07/08 18:22**