

Table of Contents

Process Data Setup 1

Touch Probe Setup

x 터치프로브 사용을 위한 설정 안내 페이지입니다.

Process Data Setup

- 터치프로브를 사용하기 위해서는 해당 오브젝트가 PDO에 반드시 포함되어야 합니다.
 - PDO에 포함시키는 방법은 **Process Data 변경** 을 참조하시기 바랍니다.
 - SyncManager - Inputs 선택
 - PDO Assignment 탭에서 PDO Contents에 해당 오브젝트(0x60B9등)가 포함된 PDO Map 선택(체크)
 - Download 실행

The screenshot shows the 'Configurator' software interface with the 'ProcessData' tab selected. The interface is divided into several sections:

- Buttons:** Scan, Download, Upload, Save, Load, Close.
- Topology:** #00 [02FFh] MASTER-DC, #01 [0011h] MADHT1505BA1, #02 [0012h] MADHT1505BA1.
- SyncManager:**

SM	Size	Type
<input checked="" type="checkbox"/>	0	MBoxOut
<input checked="" type="checkbox"/>	1	MBoxIn
<input checked="" type="checkbox"/>	2	Outputs
<input checked="" type="checkbox"/>	3	Inputs
- PDO List:**

Index	Size	Name	SM
0x1600	9	Receive PDO mapping 1	
0x1601	19	Receive PDO mapping 2	2
0x1602	15	Receive PDO mapping 3	
0x1603	21	Receive PDO mapping 4	
0x1A00	23	Transmit PDO mapping 1	
0x1A01	25	Transmit PDO mapping 2	3
0x1A02	25	Transmit PDO mapping 3	
0x1A03	25	Transmit PDO mapping 4	
- PDO Assignment:**

<input type="checkbox"/>	0x1A00
<input checked="" type="checkbox"/>	0x1A01
<input type="checkbox"/>	0x1A02
<input type="checkbox"/>	0x1A03
- PDO Contents (0x1A01):**

Index	Size	Name	Type
0x603F:00	2	Error code	UINT
0x6041:00	2	Statusword	UINT
0x6061:00	1	Modes of operation display	SINT
0x6064:00	4	Position actual value	DINT
0x606C:00	4	Velocity actual value	DINT
0x6077:00	2	Torque actual value	INT
0x60B9:00	2	Touch probe status	UINT
0x60BA:00	4	Touch probe pos1 pos value	DINT

At the bottom, there are fields for 'Index' and 'Addr', and a checkbox for 'Apply AutoAddress To Servo' with the text 'Apply to the same product'.

From:

<https://www.comizoa.com/info/> - -

Permanent link:

https://www.comizoa.com/info/doku.php?id=platform:ethercat:2_info:10_touchprobe:20_setup&rev=1564381226

Last update: **2024/07/08 18:22**