

Table of Contents

API

- [ecGn_LoadDevice](#)
- ecNet_GetCfgSlaveCount
- ecNet_ScanSlaves
- ecNet_SetAIState
- ecSlv_GetAIState_A
- ecmGn_GetAxisList
- ecdiGetNumChannels
- ecdoGetNumChannels
- ecNet_GetVerInfo
- ecNet_CheckReverseConnections
- ecSlv_IsReverseConnected_A
- ecNet_GetVerInfo
- ecmSxSt_GetMotState
- ecmSxMot_Stop
- ecmSxCtl_ResetAlm
- ecmSxCtl_GetSvon
- ecmSxCtl_SetSvon
- ecmHomeCfg_SetMode
- ecmHomeCfg_SetOffsetEx
- ecmHomeCfg_SetOffset
- ecmHomeCfg_SetSpeedPatt
- ecmHomeMot_MoveStart
- ecmHomeSt_IsBusy
- ecmHomeSt_GetFlags

From:
<https://www.comizoa.com/info/> - -

Permanent link:
https://www.comizoa.com/info/doku.php?id=platform:ethercat:70_users_guide:00_cookbook:20_systeminit:30_api&rev=1620955096

Last update: **2024/07/08 18:22**