

.....	1
.....	1
Case 1	1
Config Info	2
Case 2	2
Case 3	2
Case 4	3

x 가 .

(Cyclic Torque Mode) Target Torque 가 가 .

Case 1

- OutPDO Data Torque
- 1)

- OutPDO Data Torque 가 Configuration
 - Torque OutPDO Map

The screenshot shows the 'Configurator' software interface. The 'ProcessData' tab is active, displaying the following data:

SM	Size	Type	Index	Size	Name	SM
0	256	MBoxOut	0x1600	9	Receive PDO mapping 1	
1	256	MBoxIn	0x1601	19	Receive PDO mapping 2	2
2	19	Outputs	0x1602	15	Receive PDO mapping 3	
3	25	Inputs	0x1603	21	Receive PDO mapping 4	
			0x1A00	23	Transmit PDO mapping 1	

Index	Size	Name	Type
0x6040:00	2	Controlword	UINT
0x6060:00	1	Modes of operation	SINT
0x6071:00	2	Target torque	INT
0x607A:00	4	Target position	DINT

- Config

Configuration Guide

- XML

. (OMRON xml)

- Torque Monitor가

Torque Monitor Failed

×

Config Info



Case 2

-
- SDO 0x6080 (Max motor speed) 0 ²⁾
- SDO 0x6080 (Max motor speed)
- rpm

Case 3

-
- Pr0.00 0
-
- , 0x607E
- (Polarity) ³⁾
- Pr0.00 0

Case 4

-
- Pr0.08 0
- **PANASONIC :**
- Pr0.08 0

1)

OutPDO Data

2)

Omron 0x607F (Max Profile Speed)

3)

No Reverse : 0 / Reverse : 224

From:

<https://www.comizoa.com/info/> - -

Permanent link:

https://www.comizoa.com/info/doku.php?id=platform:ethercat:70_users_guide:20_ts:torque_failed&rev=1586998859

Last update: **2024/07/08 18:22**