

.....	1
Case 1 .....	1


× Torque가 0

### Case 1

- InPDO Data Torque

- 1)

- InPDO Data Torque 가 Configuration
  - Torque PDO Map

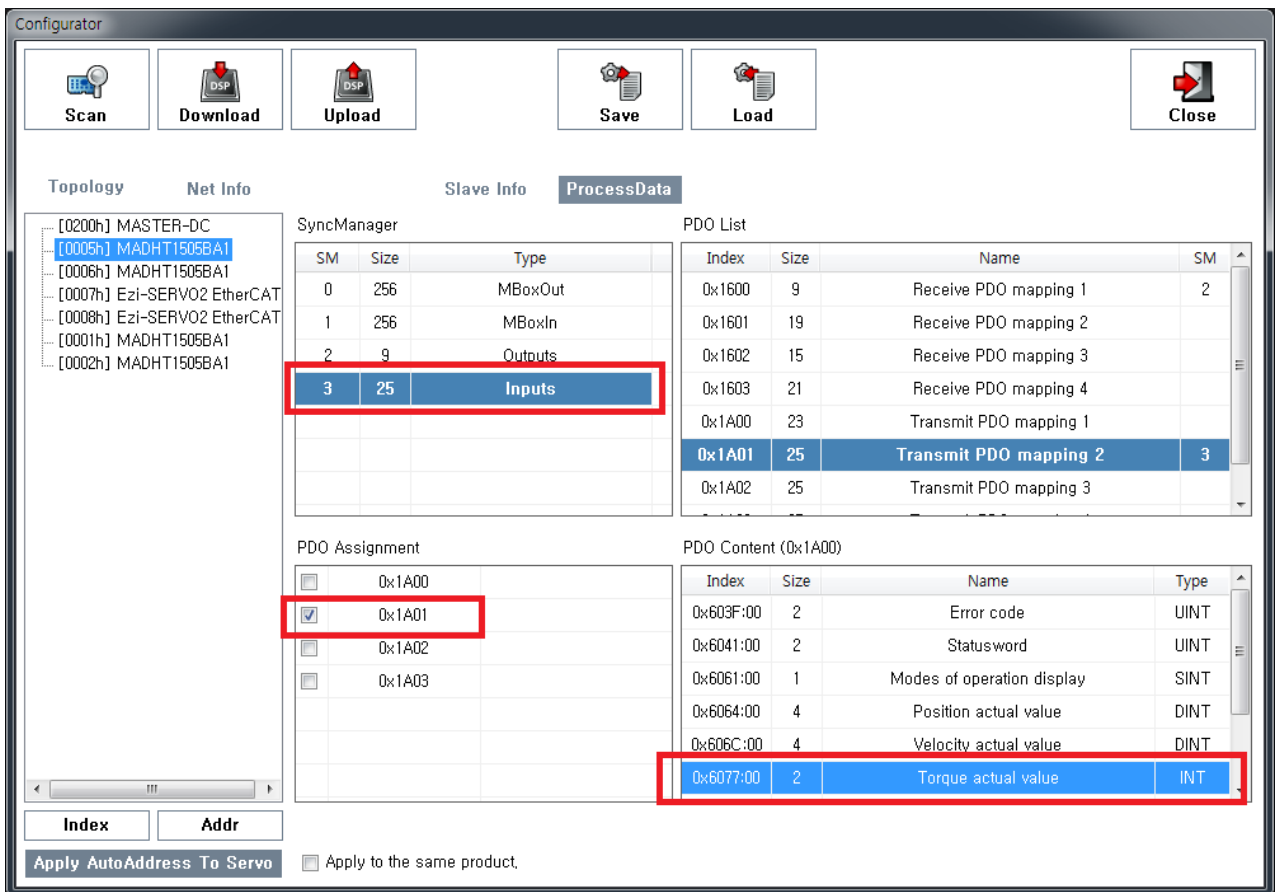

- Config Configuration Guide

1)  
InPDO Data

From:

<https://www.comizoa.com/info/> - -

Permanent link:

[https://www.comizoa.com/info/doku.php?id=platform:ethercat:70\\_users\\_guide:20\\_ts:torque\\_monitor\\_failed&rev=1586998925](https://www.comizoa.com/info/doku.php?id=platform:ethercat:70_users_guide:20_ts:torque_monitor_failed&rev=1586998925)

Last update: **2024/07/08 18:22**