

**NEMO Master Board** ..... 1  
NEMO Master Board ..... 1  
..... 2  
..... 3

# NEMO


× NEMO

## NEMO Master Board


### NEMO Master Board

(NemoFWU.exe)


- 1. - Firmware - NemoFWU.exe
- 2. RT(LX520), ML2(LX530S), ML3(LX530), SS3(LX540/H)

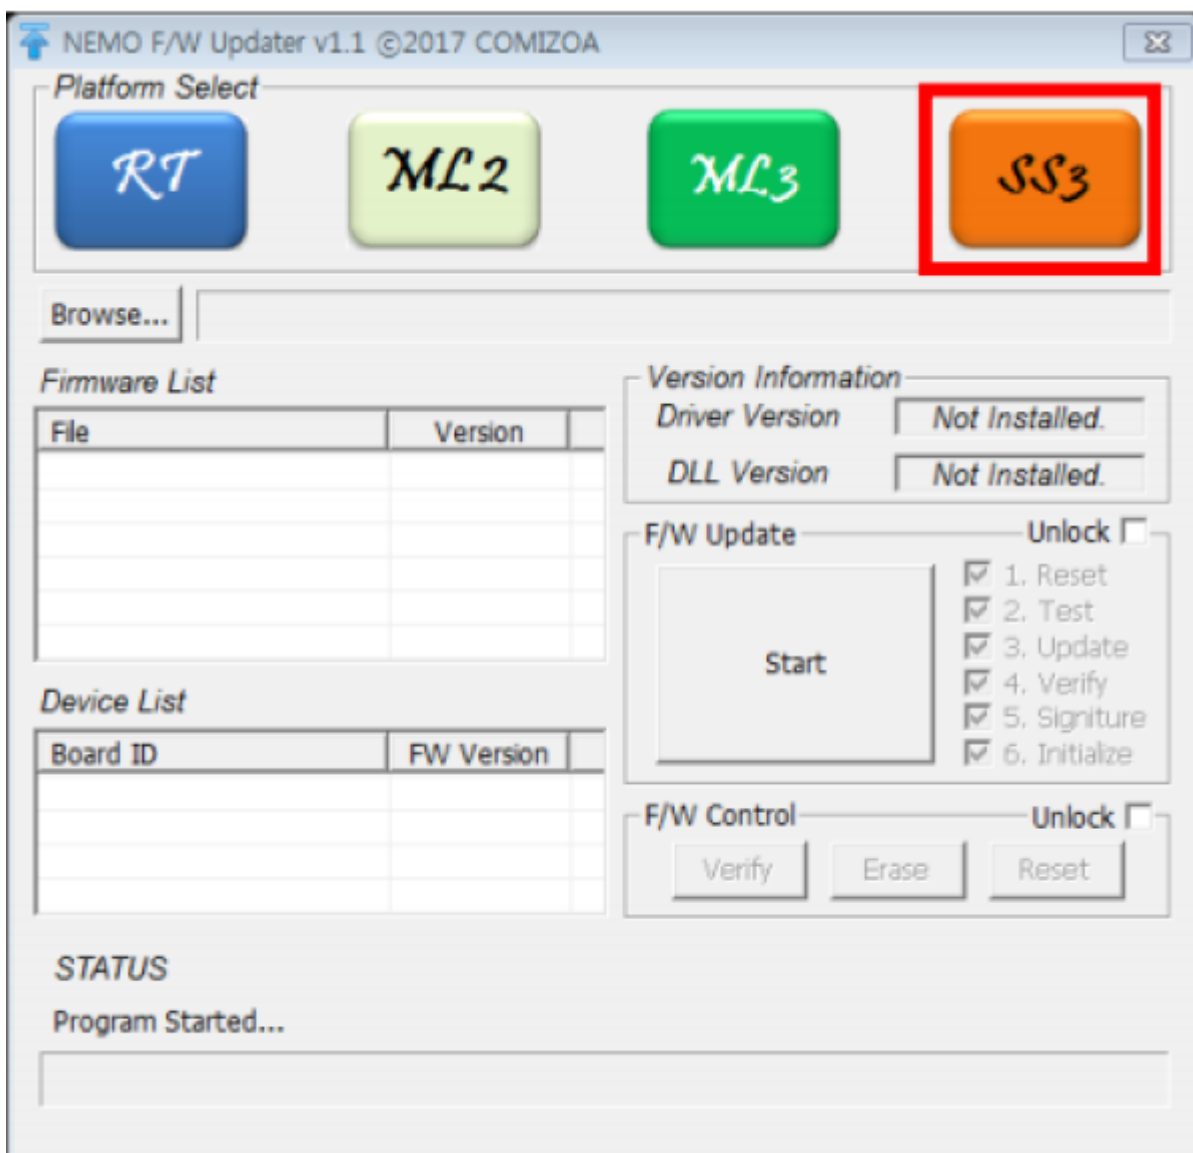


- 가 DLL  
- Firmware DLL

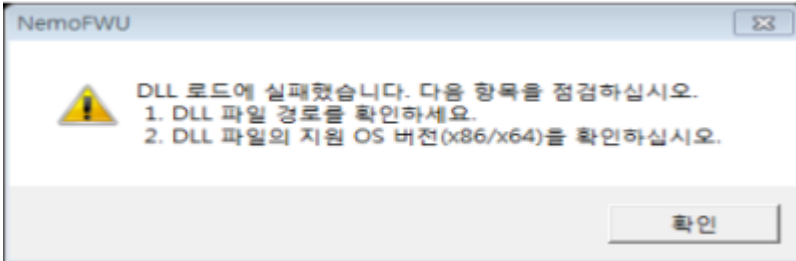


- Browse .dat

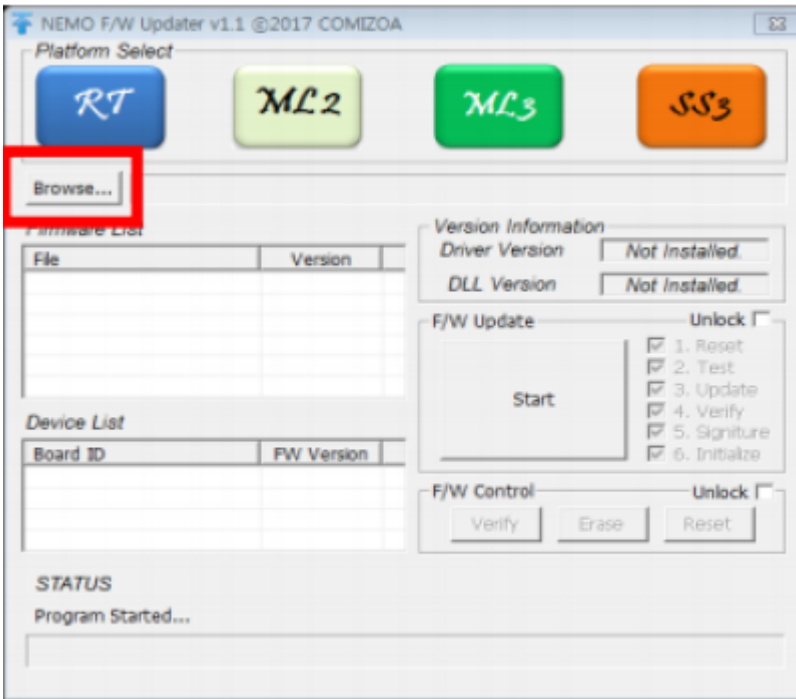

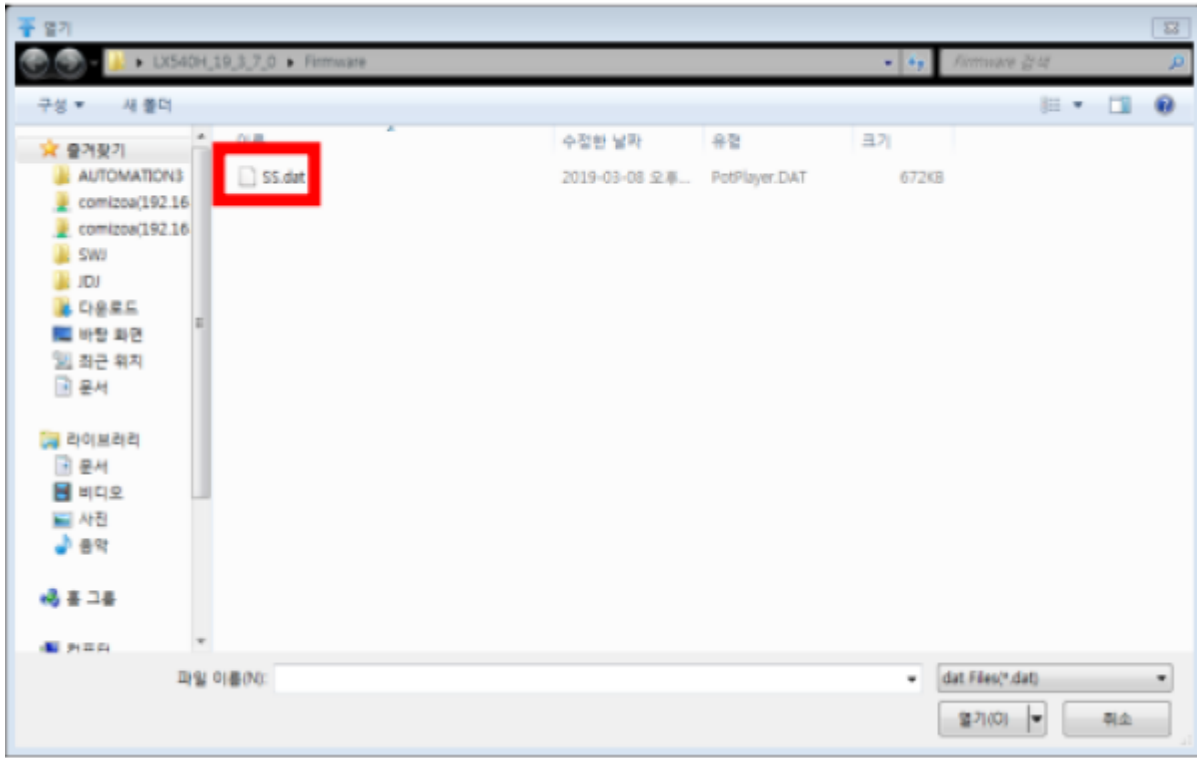

- Start

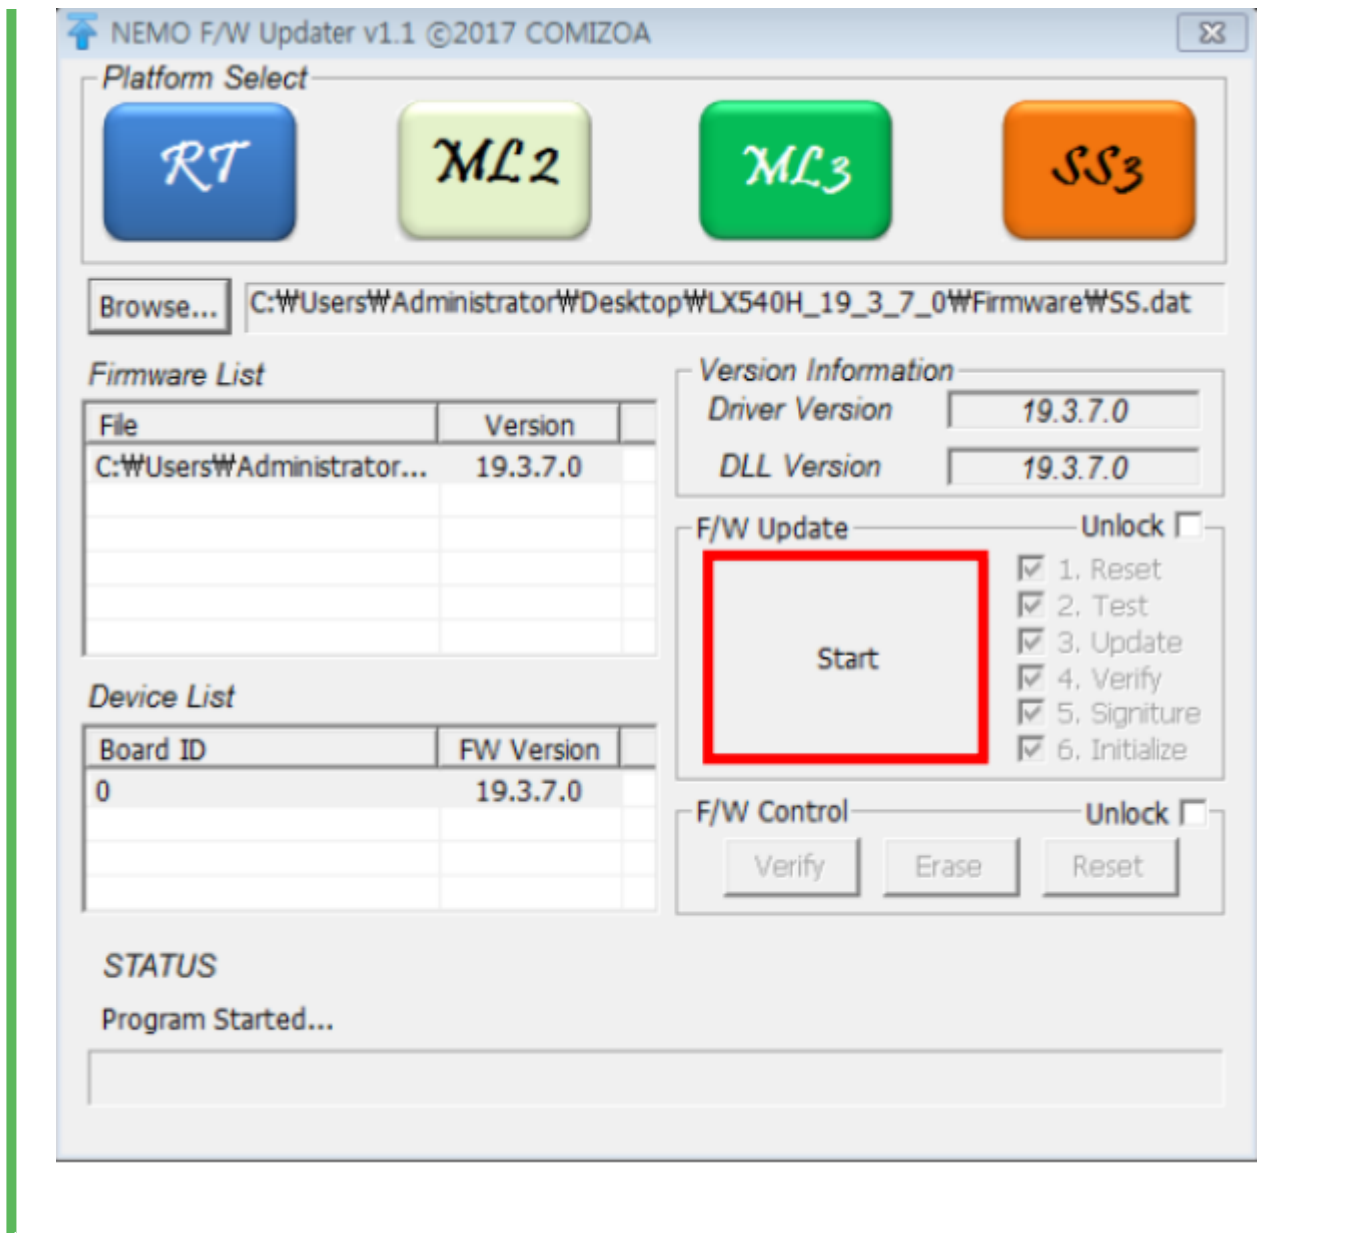

From: <https://www.comizoa.com/info/> - -

Permanent link: [https://www.comizoa.com/info/doku.php?id=practice:nemo\\_%ED%8E%8C%EC%9B%A8%EC%96%B4\\_%EC%97%85%EB%8D%B0%EC%9D%B4%ED%8A%B8&rev=1629350582](https://www.comizoa.com/info/doku.php?id=practice:nemo_%ED%8E%8C%EC%9B%A8%EC%96%B4_%EC%97%85%EB%8D%B0%EC%9D%B4%ED%8A%B8&rev=1629350582)

Last update: 2024/07/08 18:23